

Betriebsanleitung  
 Operating Instructions  
 Instructions de service  
 Istruzioni d'uso  
 Handleiding  
 Instrucciones para el manejo  
 Manual de instruções  
 Naudojimosi instrukcija  
 Kasutusjuhend  
 Lietošanas instrukcija  
 Driftsinstruks  
 Driftsinstruktioner  
 Käyttöohje  
 Driftsvejledning  
 Instrukcja obsługi

Kezelési útmutató  
 Návod k obsluze  
 Navodilo za uporabo  
 Návod na obsluhu  
 Upute za rad  
 Manual de operatii  
 Treoracha Oibriúcháin  
 Οδηγίες χρήσης  
 El Kitabi  
 Инструкции за експлоатация  
 Инструкция по эксплуатации  
 取扱説明書  
 사용설명서  
 使用说明书





DT 4.40K

2006/42/EG











		<p><b>MAX. PRESSURE</b></p>	
			<p><b>MAX.</b></p>
<p><b>AIR</b></p>		<p>DIN EN ISO 3744</p>	<p> <math>L_{pA} = 67 \text{ dB(A)} - 50\text{Hz}</math>  <math>L_{pA} = 70 \text{ dB(A)} - 60\text{Hz}</math>  <math>K_{pA} = 3 \text{ dB(A)}</math> </p>
			<p>m<sup>3</sup>/h</p>


	<p> <math>A &gt; 100\text{mm}</math>  <math>A &gt; 4"</math>  <math>&gt; 5^\circ\text{C}/41^\circ\text{F}</math>  <math>&lt; 45^\circ\text{C}/113^\circ\text{F}</math> </p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>1</p> <p>46,0 kg 101,4 lbs</p>	<p>2</p>		

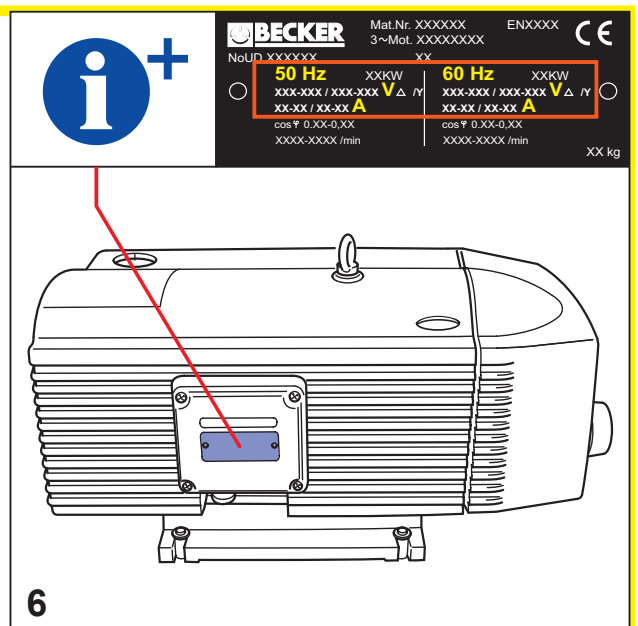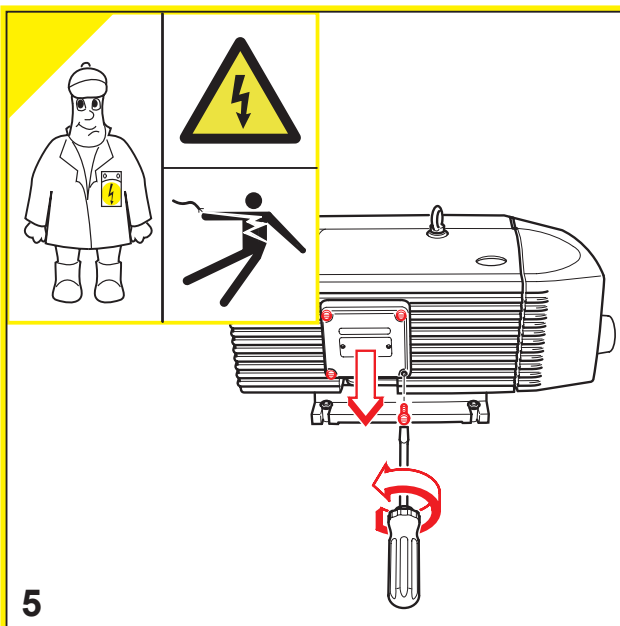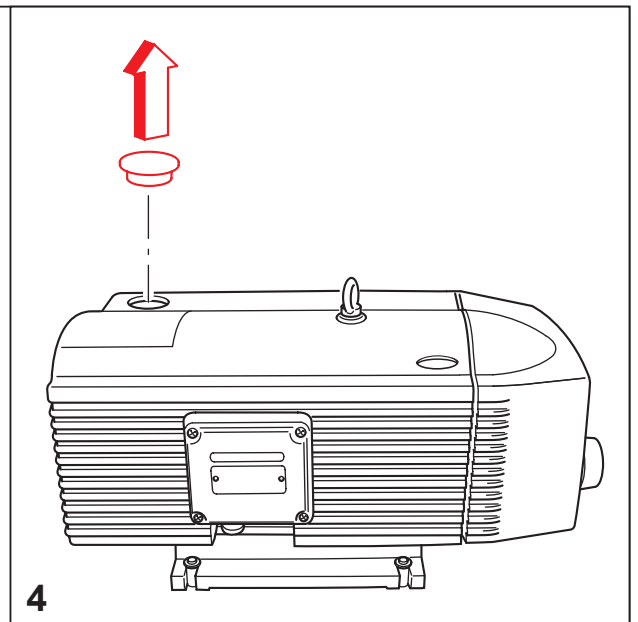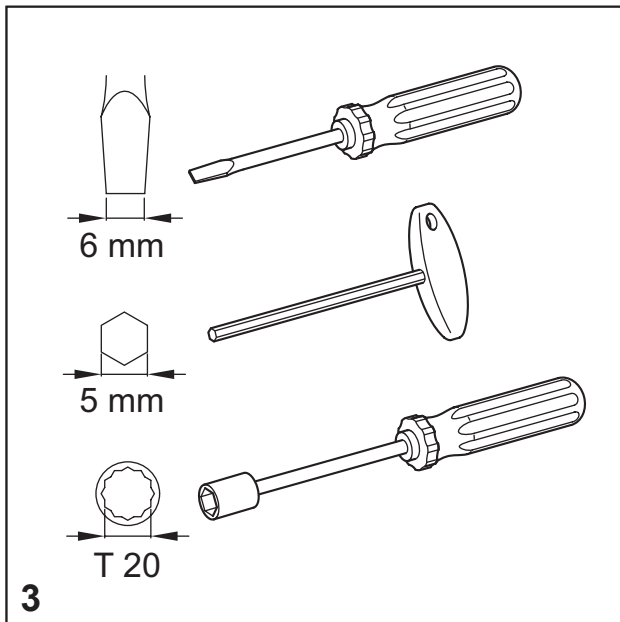

<b>BECKER</b>		Mat.Nr. XXXXXX	ENXXXX	CE
No. Un XXXXXX		3~Mot. XXXXXXXX	xx	
<b>50 Hz</b>	XXKW	<b>60 Hz</b>	XXKW	
XXX-xxx / xxx-xxx V $\Delta$ / Y		XXX-xxx / xxx-xxx V $\Delta$ / Y		
XX-xx / xx-xx A		XX-xx / xx-xx A		
cos $\varphi$ 0.XX-0.XX		cos $\varphi$ 0.XX-0.XX		
XXXX-XXXX /min		XXXX-XXXX /min		XX kg

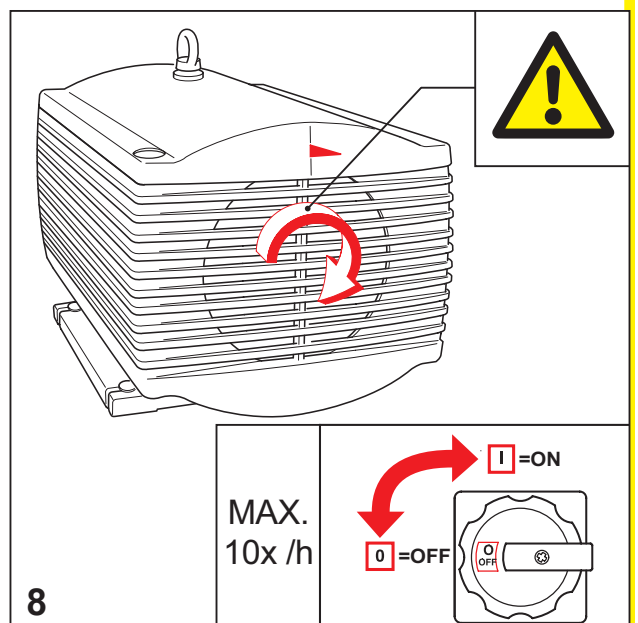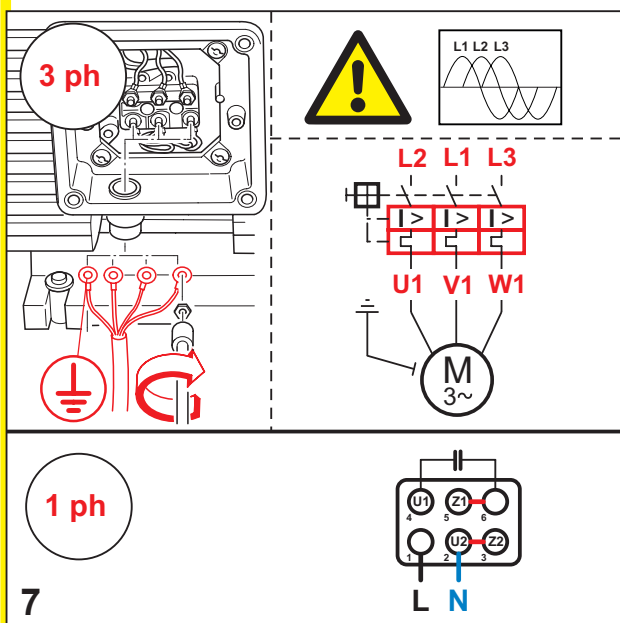

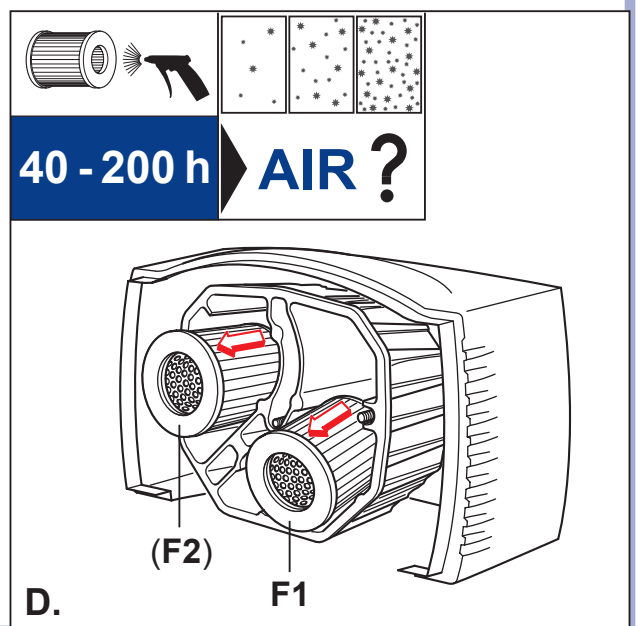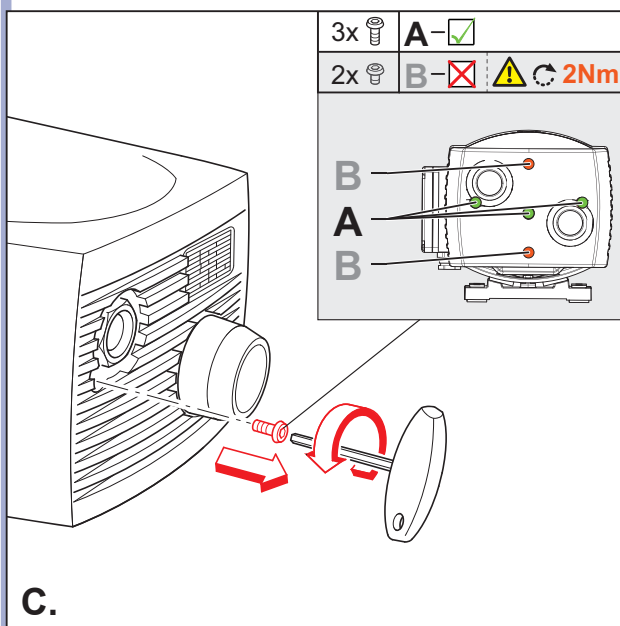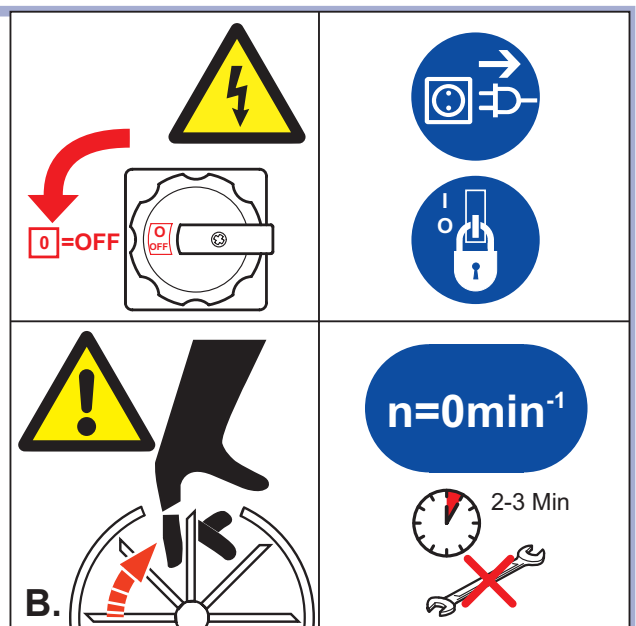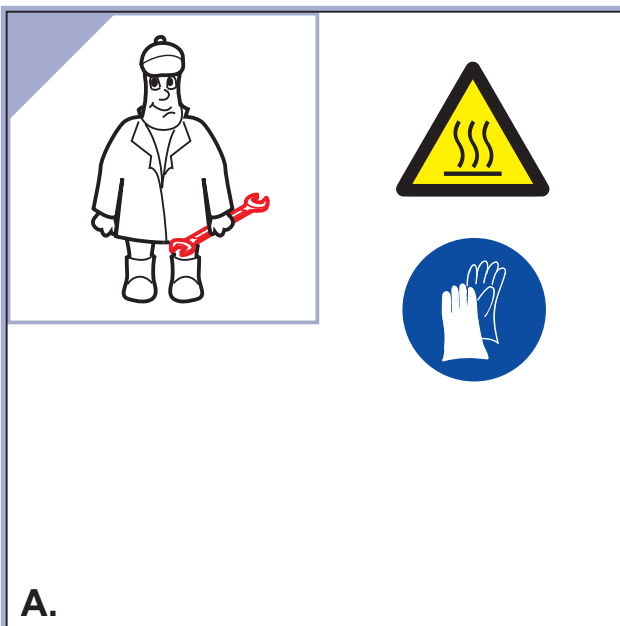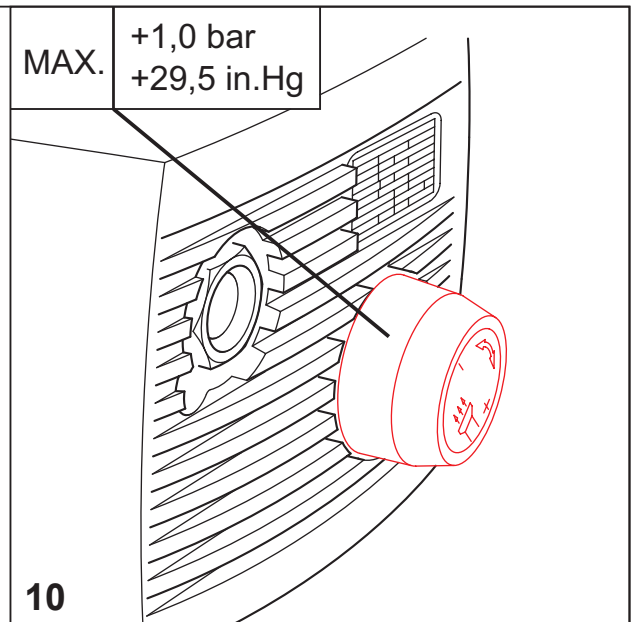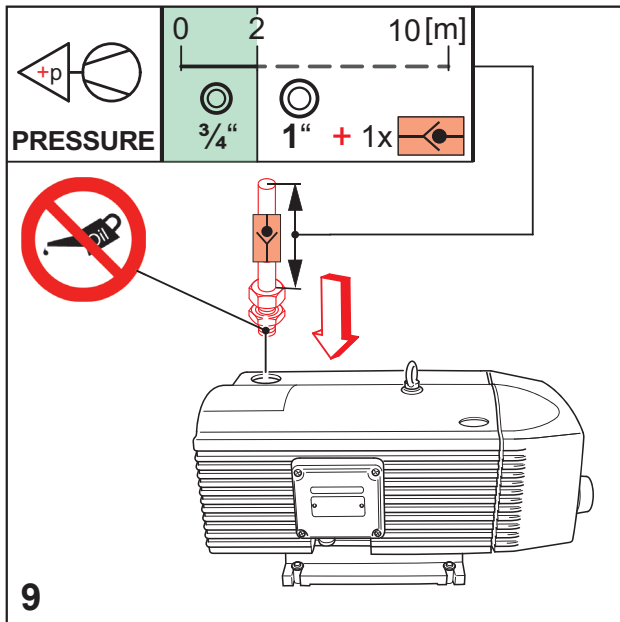

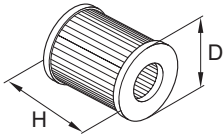


**F1:** D: 64 mm  
H: 70 mm  
No.: 90950500000



EN149 - FFP3  
42 CFR 84 - N100

**F2:** D: 64 mm  
H: 60 mm  
No.: 90952900000



**E.**

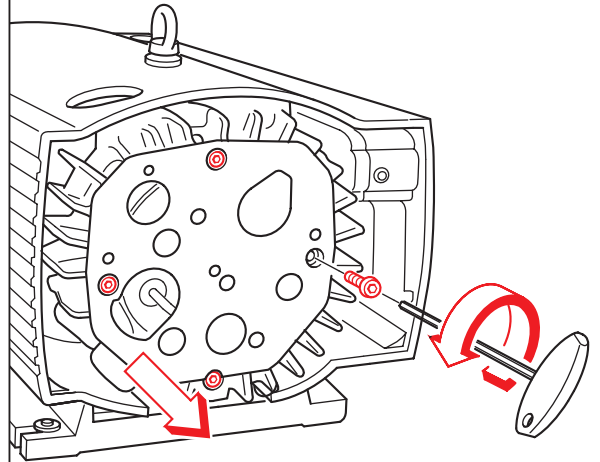

**F.**



**3000 h**

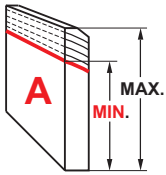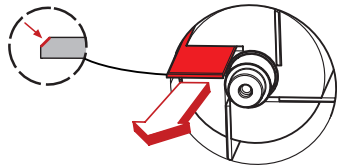


$A_{MAX} = 43mm$   
 $A_{MIN} = 28mm$

$A_{\text{red wedge}} < 28mm$




→ No. 90135200007 (SET)

**G.**

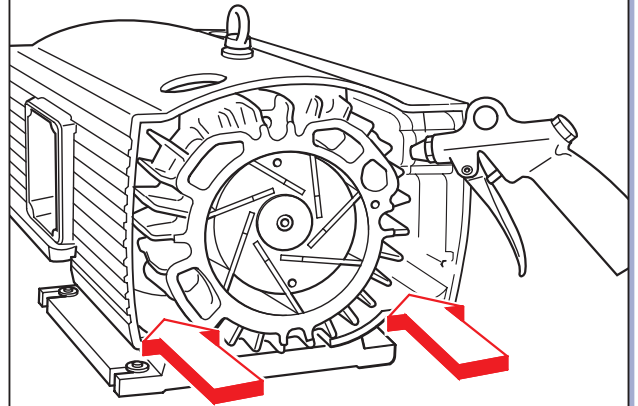

**H.**

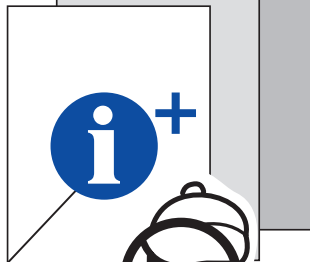

[www.becker-international.com](http://www.becker-international.com)

**BECKER**

Gebr. Becker GmbH  
Hölker Feld 29-31  
D-42279 Wuppertal  
[info@becker-international.com](mailto:info@becker-international.com)



[www.becker-international.com](http://www.becker-international.com)

Sales and service network